

85mm

160mm

正面

CoolFire

(Aids for a Easy Life)

Super Vibration Wake Up
Alarm Sweatband Watch



Customer service:
Support@timechant.com

Dear Customer,
Thank you for your purchase of the CoolFire Super Vibration Wake Up Alarm Sweatband Watch. It's comfortable to wear on your wrist and it wakes you up with strong haptic vibrations. It comes with 6 alarms and a 24 hours precision 1/100 second digital stopwatch. The sweatband is washable. It is powered by a lithium rechargeable battery that runs the watch for 4-6 weeks with a single full charge. Hope that you will love this brand new wake up sweatband watch!

Please contact support@timechant.com
We are always happy to help !

Greetings from,
The TimeChant support team

IM code: (M2103)



This watch is not water resistant.
Avoid contact with liquids.
Detach the watch before washing the sweatband.

CHARGE THE WATCH FOR THE FIRST TIME

It is recommended to charge up the watch for 4 hours with the USB cable provided for the first time. You need to connect the cable with any USB adaptor for the charging. The charging socket of the watch can be found from the back of the watch.




SET UP THE WATCH

Button functions

- Press this button to light up the LCD display
- Hold this button to show STOPWATCH (Backlight turns on at the same time)
- Hold this button to set TIME and vibration strength.
- First press of this button to light up the LCD display
- Continue pressing this button one more time to show Calendar.
- Hold this button to set ALARM.



SET TIME AND CALENDAR

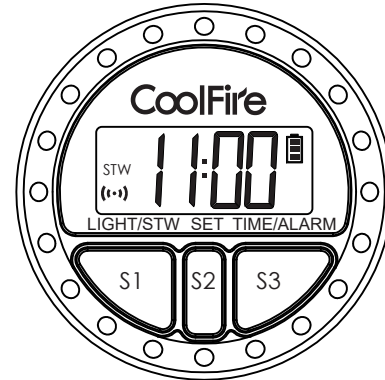


1. Hold down S2 (the right button) until it shows a flashing 12 or 24
2. Press S1 or S3 to set the watch to 12 or 24 hour mode
3. Press S2 to confirm (Hour and Minute are flashing)
4. Press S1 to set HOUR and S3 for MINUTE
5. Press S2 to confirm (Date and Month are flashing)
6. Press S1 to set Date and S3 for Month
7. Press S2 to confirm (Year is flashing)
8. Press S1 or S3 to set Year
9. Press S2 to confirm (The En or DE is flashing. En means English and DE means German. You don't need to set a day of the week as it is

10. Press S1 or S3 to set your language (English or German)
11. Press S2 once to confirm (Shows Month-Date with the Month flashing)
12. Press S1 or S3 to change the position of Month as you like
13. Press S2 once to confirm (H, M or L is flashing)
14. Press S1 or S3 to set the vibration strength (H=High, M=Medium and L=Low. You feel the vibration strength during the setting)
15. Press S2 once to confirm and Exit

Set Daily Alarm (Totally 6 vibration alarms)

(They are daily alarms. Once an alarm is being set, the alarm repeats every day until it is set to OFF)

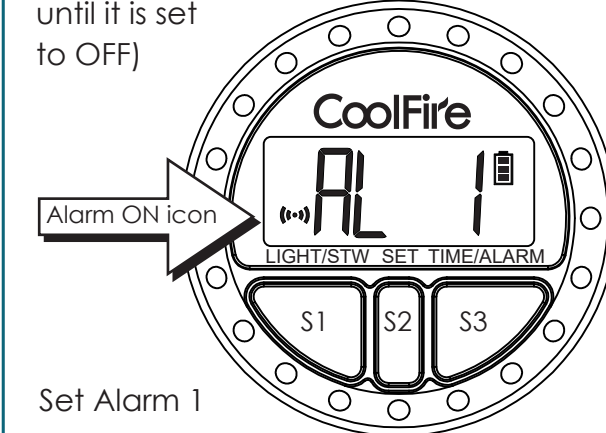


Set Alarm 1

1. Hold down S3 until it shows AL 1 (means Alarm 1)
2. Release the button and wait until the watch shows the time of Alarm 1
3. Press S1 to set Alarm Hour and S3 for Alarm Minute
4. Press S2 to confirm (AL-On or AL-OF is flashing)
5. Press S1 or S3 to set the alarm to ON or OFF (the alarm sets itself to ON once an alarm time is update)
6. Press S2 to confirm and Exit

Set Alarm 2

1. Hold down S1 until it shows AL 1 (means Alarm 1)
2. Press S2 once to show AL-On or AL-OFF
3. Continue to press S2 to show AL 2 (means Alarm 2)
4. Release the button and wait until the watch shows the time of Alarm 2
5. Press S1 to set Alarm Hour and S3 for Alarm Minute
6. Press S2 to confirm (AL-On or AL-OF is flashing)
7. Press S1 or S3 to set the alarm to ON or OFF (the alarm sets itself to ON once an alarm time is update)
8. Press S2 to confirm and Exit

Follow the same way to set alarm 3 to 6.

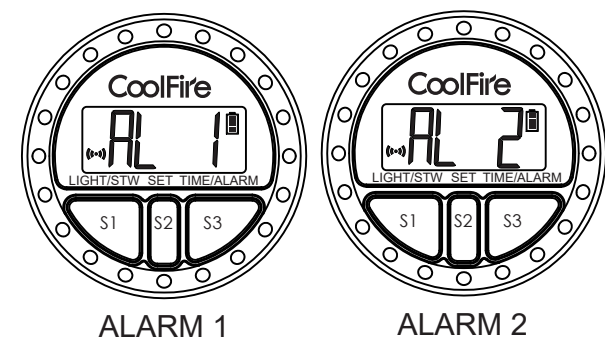

ALARM 1

ALARM 2


TIPS FOR HEAVY SLEEPER

It is recommended to set up more than one alarm for heavy sleepers.

For example, if your time to wake up is 7am then you should set up a first alarm (AL 1) to be 6:50am and then a second alarm (AL 2) to be 7am to wake you up.

Snooze the Alarm


When the alarm goes off (vibrating), press any button once to put the alarm to snooze (the alarm comes back after a few minutes)

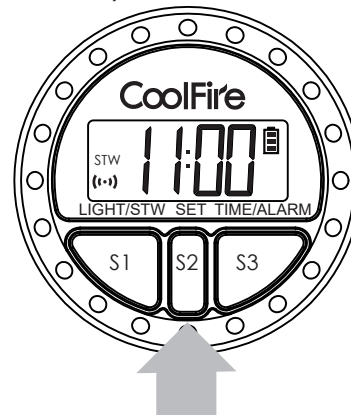

Press any button once
to snooze the alarm

Stop the Alarm


When the alarm goes off (vibrating), HOLD any button for 1 second to stop the alarm (the alarm comes back tomorrow at the same time).

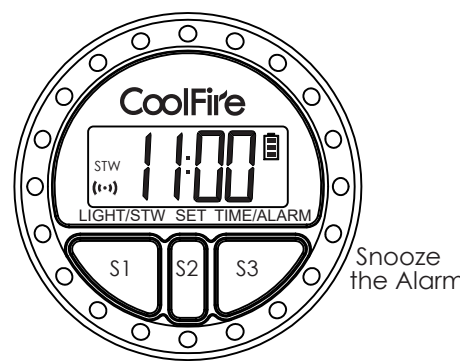

Hold any button to stop the alarm

How to use the stopwatch?

It's a precision 24 hours 1/100 second digital stopwatch.

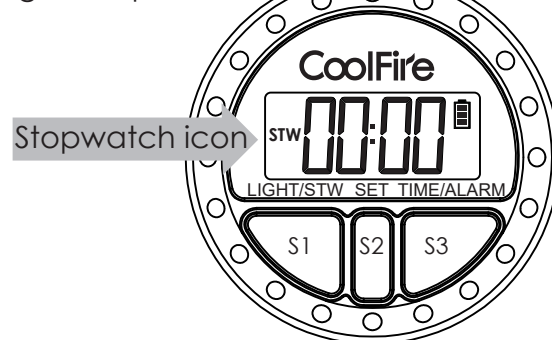

- Hold S1 (the left button) until it shows the flashing STW Stopwatch Icon
- Press S3 (the right button) to Start/Stop the stopwatch
- Press S1 twice (the left button) to reset the stopwatch to 00:00 (after the stop watch stops) when needed.
- Hold S1 to Exit (the stopwatch resets to 00:00 first and then exit. The STW icon disappears).

How to charge the watch?



The watch can run for 4-6 weeks after a full charge (test was done based on one alarm per day with strength set to High).

Connect the USB cable (provided) to any USB adaptor. Plug it into the Charging Socket of the watch for 4 hours for a full charge.

It is recommended to charge up the watch every month to prolong the battery life. Never allow the battery to drain out (drop to 0V) or the battery dead and a new battery needs to be replaced.

How to wash the sweatband?



This vibrating sweatwatch is not water resistant. Avoid contact with liquids.

Detach the watch before washing the sweatband.

You need to detach the watch from the sweatband by following the directions marked on the Locking Ring to release or lock the watch. Then, push out the watch from the sweatband for washing.

MAINTENANCE

- Set up MORE THAN 1 ALARM to wake up for a heavy sleeper.
- DO NOT wash the sweat band before detaching the watch.
- Charge your watch every 2 weeks to avoid battery drain off to dead.
- This is NOT a toy, keep away from babies and children.
- DO NOT place or store the product near heat or open flame.
- DO NOT place or store the product in a moist, dust place or the place with corrosive gas.
- Avoid heavy strikes.

